



IVENDO Solar  
ul. Wojska Polskiego 2D  
14-200 Łtawa

## Manual for system installation on a flat roof

---

# KDP-B

These instructions contain information on how to assemble a superstructure for for 4 horizontally arranged modules.

### Materials:

- Stainless steel A2
- Aluminum 6060 T66



**It is essential that you familiarize yourself thoroughly with the instructions and use them in accordance with the intended purpose.**

## Information about the security

---

Before starting the assembly work, you should familiarize yourself with the following safety instructions, which will reduce the risk of an accident.



**Attention!** The setup and connection should be performed by qualified personnel with the appropriate authorizations. The general safety rules must also be observed.



**Attention!** During the work, it is necessary to observe the applicable national and European standards, especially the electrical installations. It is also necessary to follow the instructions of the other components, e.g. the inverter.



**Attention!** Danger of falling from heights. The rules for working at heights and the necessary safety equipment such as harnesses and safety ropes must be observed.



**Attention!** Danger of falling objects. Special care must be taken. Before starting work, the assembly area must be appropriately secured to avoid hazards.



**Attention!** Warning of electric current. Be particularly careful when performing electrical work, especially when connecting modules and when setting up and connecting the inverter to the modules.

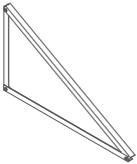
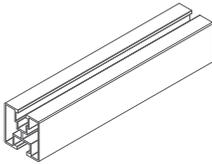
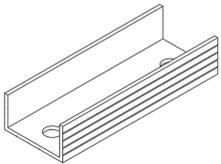
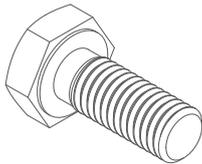
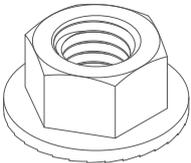
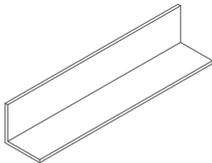
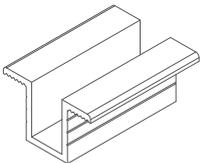
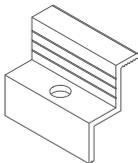
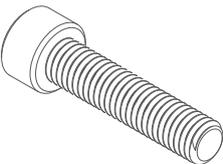
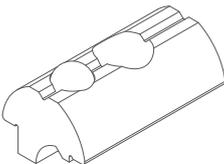
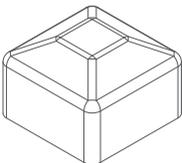


**Attention!** Warning about highly flammable materials. Photovoltaic modules, inverters and other electrical equipment should not be used near easily flammable materials.



**Attention!** The assembly work must not be carried out by persons under the influence of alcohol or other intoxicating substances.

# Elements list

	<p><b>A</b></p> <p><b>Triangular Mounting bracket</b></p> <hr/> <p>5 Piece</p> <p><i>Material: Aluminium</i></p>		<p><b>B</b></p> <p><b>ECO SMA rail 40x40x1,5</b></p> <hr/> <p>6 Piece</p> <p><i>Material: Aluminium</i></p>
	<p><b>C</b></p> <p><b>Rail</b></p> <hr/> <p>4 Piece</p> <p><i>Material: Aluminium</i></p>		<p><b>D</b></p> <p><b>Hexagon head screw M10</b></p> <hr/> <p>32 Piece</p> <p><i>Material: Stainless steel</i></p>
	<p><b>E</b></p> <p><b>Sleeve M10</b></p> <hr/> <p>32 Piece</p> <p><i>Material: Stainless steel</i></p>		<p><b>F</b></p> <p><b>Load carrier</b></p> <hr/> <p>6 Piece</p> <p><i>Material: Aluminium</i></p>
	<p><b>G</b></p> <p><b>Center clamp</b></p> <hr/> <p>6 Piece</p> <p><i>Material: Aluminium</i></p>		<p><b>H</b></p> <p><b>End clamp</b></p> <hr/> <p>4 Piece</p> <p><i>Material: Aluminium</i></p>
	<p><b>I</b></p> <p><b>Allen screw M8</b></p> <hr/> <p>10 Piece</p> <p><i>Material: Stainless steel</i></p>		<p><b>J</b></p> <p><b>Sliding bush Groove stone M8</b></p> <hr/> <p>10 Piece</p> <p><i>Material: Aluminium</i></p>
	<p><b>K</b></p> <p><b>Rail cover</b></p> <hr/> <p>4 Piece</p> <p><i>Material: plastic</i></p>		

# Assembly instruction

---



## Necessary tools:

- Allen wrench (size 5)
- Ring wrenches (size 13, 15 and 17 mm)
- Cordless screwdriver with Torque adjustment
- Cross-recess bits / attachments for the Cordless screwdriver (PZ)



## Tightening torques:

- Tighten middle and end clamps with a tightening torque of 8.5 Nm
- Tighten M8 bolts and nuts with a tightening torque of 18 Nm.
- Tighten M10 bolts and nuts with a tightening torque of 36 Nm



## Staffing for assembly:

- At least 2 persons



## Assembly time:

- About 2 hours

# Control and maintenance

---

During the installation work, it must be ensured that the photovoltaic system is used according to its intended purpose. All changes in the use of construction elements, including connection with elements that do not come from IVENDO Solar, the modification of the construction by welding, shortening, lengthening, drilling, etc., and increasing the load on the systems will result in the loss of warranty claims and may have a direct impact on the life of the systems and their safe use.

The technical inspection and maintenance of the mounting system should be carried out at least once every six months, special attention should be paid to:

- Bolted connections,
- The condition and connections of the electrical cables are checked,
- the visual condition of the PV modules (contamination, mechanical damage) is checked.

# Assembly of the set

- 1 Before you start mounting, you should determine the plan for the arrangement of the modules (Fig. 1) and determine the mounting triangulates (Fig. 2).

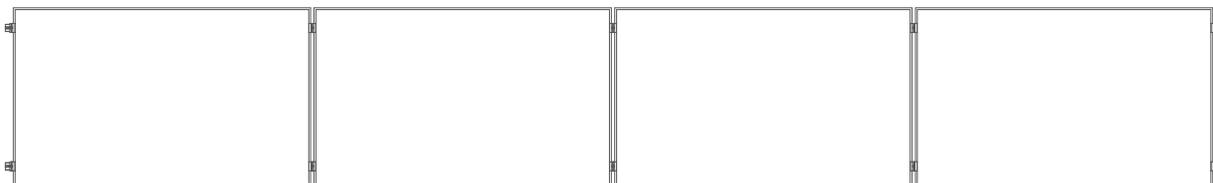


Fig. 1. plan for the arrangement of the modules

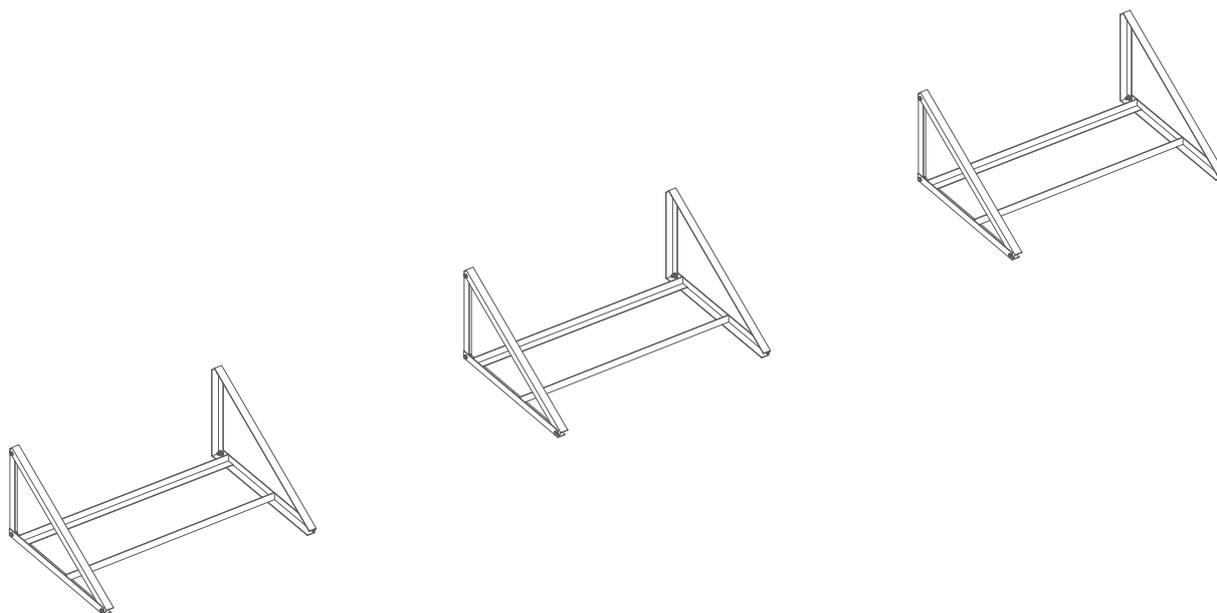


Fig. 2. arrangement of the mounting triangles

- 2 The weight carriers are fastened to the base of the mounting triangle with a hexagon head screw DIN933 M10 X 25 and a nut DIN6923 M10 (Fig. 3).

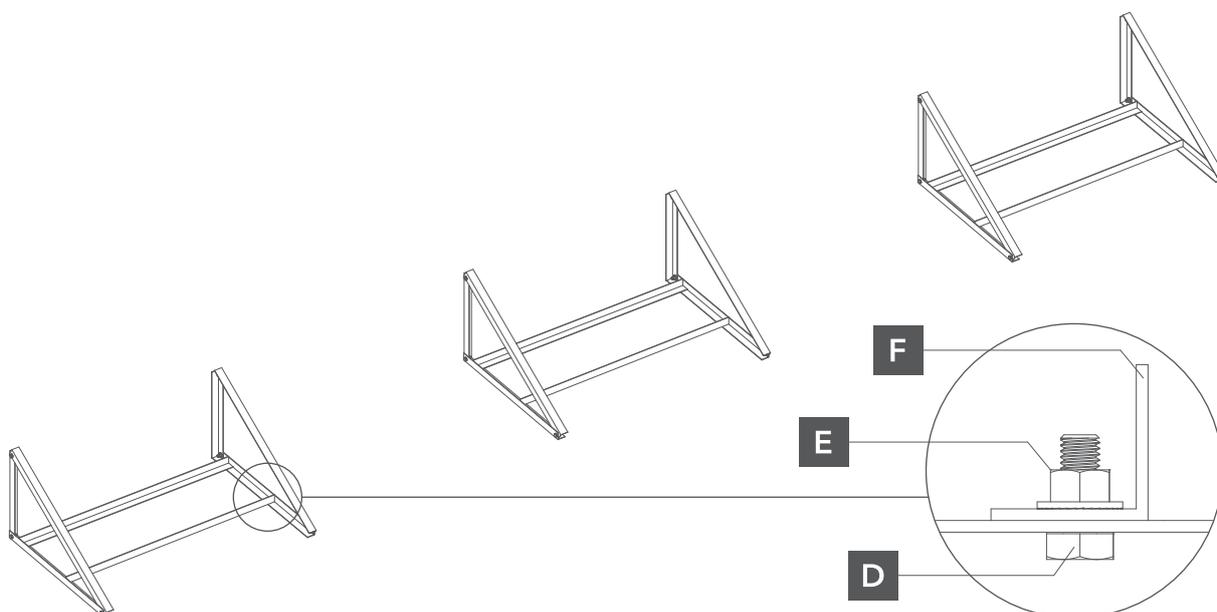


Fig. 3. fastening of the ballast brackets

- 3** Under the lower base of the assembly triangle you need to put a rubber SBR mat. The entire building should be loaded with concrete blocks of 38 x 24 x 12 cm and a individual weight of 25 kg. The blocks should be placed on the weight bars between the triangles. On a pair of weight bars should be placed 4 concrete blocks should be placed (Fig. 4).

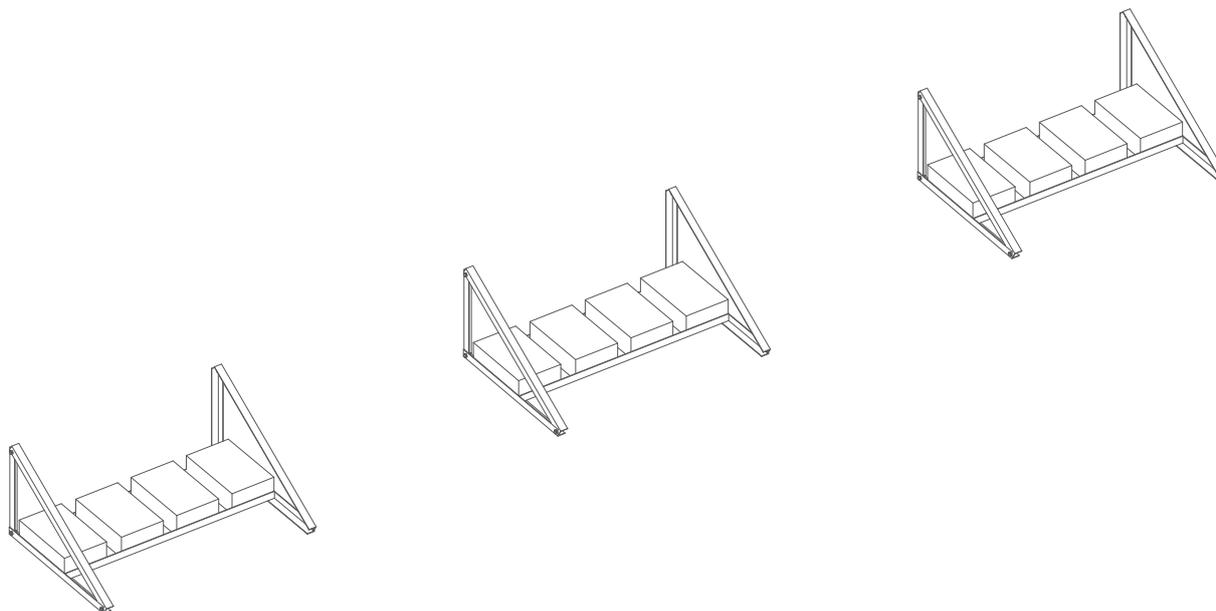


Fig. 4. arrangement of the concrete blocks

- 4** Next, if the mounting triangulates are already fixed, you need to pass one end of the rail with a DIN933 M10x25 hexagonal bolt, align it with the align it with the mounting triangulate and tighten it with a DIN6923 M10 nut (Fig. 5).

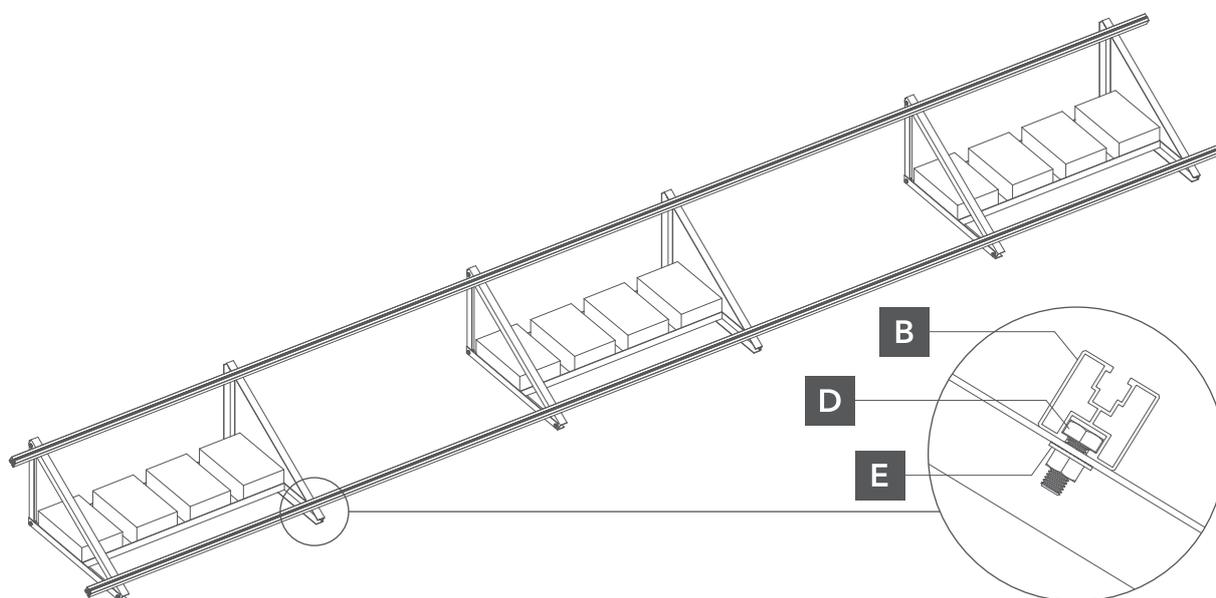


Fig. 5. fastening of the rail to the mounting triangle

- 5** On the mounting rails we place the first, outermost photovoltaic module and fix it with corner clamps. The corner clamps are fixed with Imbus screws M8 and slotted screws M8. Then we mount the middle clamps without screwing them. After mounting further modules

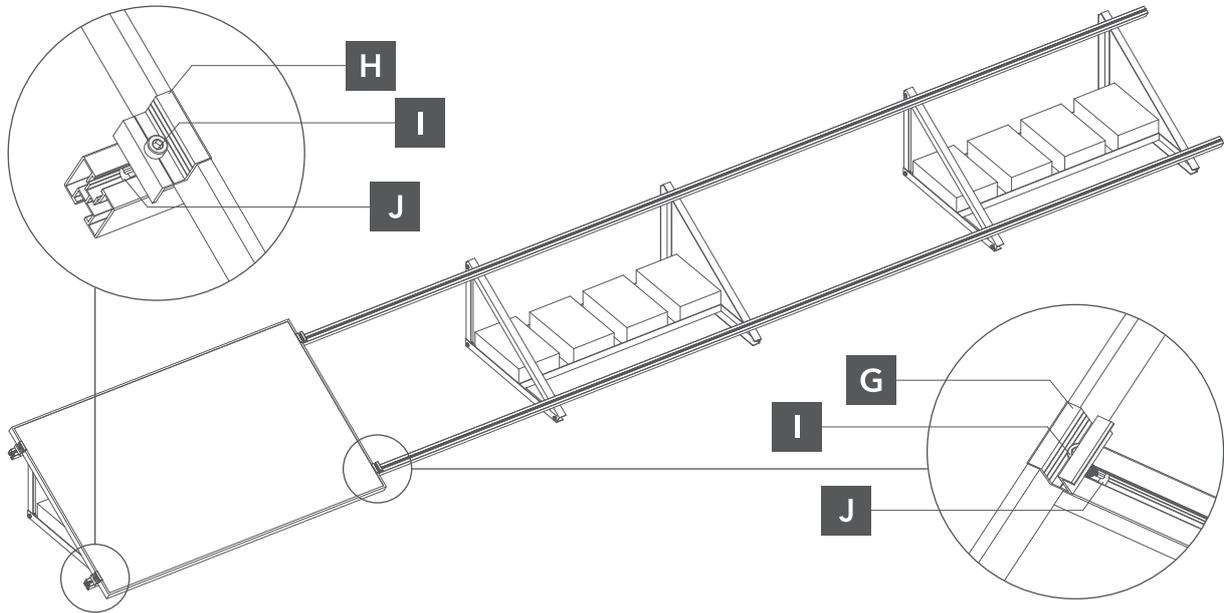
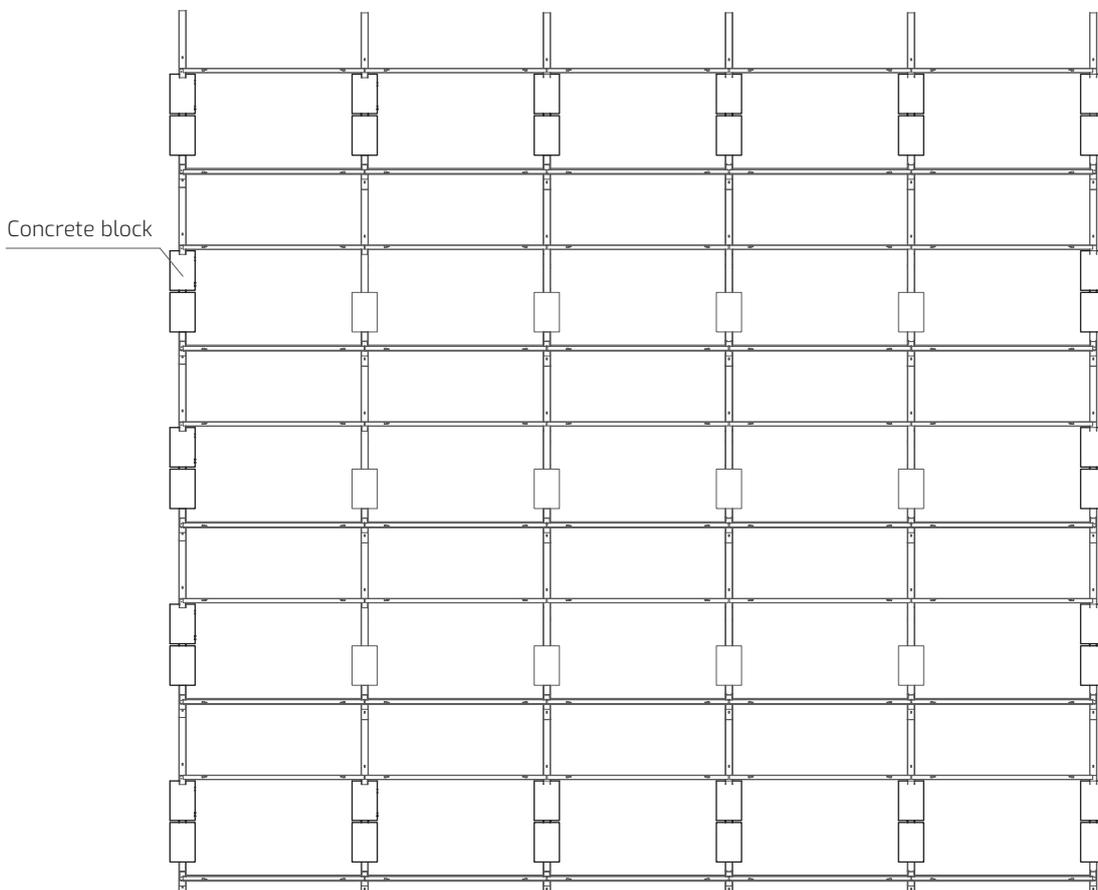


Fig. 6. fastening of the module to the mounting rail

**11**

It is recommended to place a larger number of concrete blocks on the outer side of the construct of concrete blocks should be placed.



# Legal clause

---

This manual sets out the basic standards for the installation and operation of a support system for photovoltaic modules. The instructions do not represent and do not replace a photovoltaic installation project. The correct selection of the mounting system for photovoltaic modules and the components that belong to it is the responsibility of the persons who directly perform the installation of this system. This work should be performed by professional installers with the appropriate qualifications and experience. It is the installers' responsibility to select the correct mounting system and its integration with the building or the ground depending on the conditions of the location and the needs of the customer. IVENDO SOLAR, as a manufacturer of mounting systems, does not assume any responsibility for the proper execution and installation of the structure. It is necessary that the technical inspection of the installation is carried out at least once a year by persons with the appropriate qualifications. In case of occurrence of weather anomalies (strong gusts of wind over 79 km/h, unusual amounts of snow), a technical inspection of the installation should be carried out immediately after its completion. The construction shall be used in accordance with its purpose and environmental protection requirements. It is expected that the construction will be kept in perfect technical condition and that no significant deterioration of its operational characteristics and technical performance will be allowed. Changes and modifications of mounting systems manufactured by IVENDO SOLAR, including their cutting, welding, shortening, stretching, reducing the elements specified in the instructions, increasing the spacing of the supporting posts, increasing the load on the systems or using systems against their purpose, will result in an immediate loss of warranty rights and may shorten the life of the systems and limit their safe use.